



# GoTo

## Factsheet #05:

### Taking GoTo apart and removing the upholstery

---

# Taking GoTo apart and removing the upholstery

## Standard Headrest



- 1 Unscrew the knob at the headrest anti-clockwise to remove the headrest from the GoTo Seat base.



- 2 Screw the knob into the back of the headrest to ensure safe keeping.

- 3 Unbutton the upholstery from the headrest on both sides.

- 4 Slide headrest upholstery up off the headrest.



## Standard Headrest

5

Detach the headrest from the GoTo base completely by removing the shoulder strap buckles from the headrest.



## Advanced Headrest



- 1 Unscrew the knob at the headrest anti-clockwise to remove the headrest from the GoTo Seat base.



- 2 Screw the knob into the back of the headrest to ensure safe keeping.



- 3 Undo headrest cover poppers on both sides.



- 4 Release the shoulder straps by feeding the buckle fitting through the holes on both sides.
-

## Advanced Headrest



5 Detach the shoulder straps.



6 Unfasten the straps with poppers attached as shown on both sides.



7 Push the straps through the holes in the headrest.

---

# Advanced Headrest



8 Turn headrest over and partly slide out foam insert.



9 Pull straps through the headrest plastic part and the foam to remove the cover.




10 Resulting set of parts.

# Lateral Support



- 1 Start with all the straps connected to the buckle as shown.

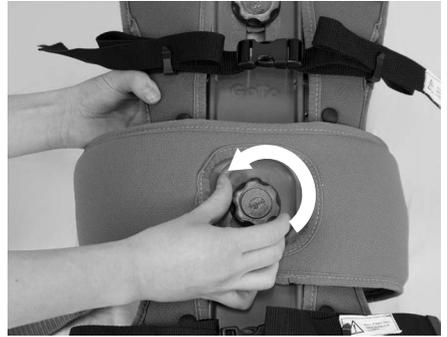

- 2 Turn the GoTo Seat over and detach the lateral support by turning the knob anti-clockwise.



- 3 Fix the knob to the slider component to prevent loss.



- 4 Slide the lateral support up and over the GoTo backrest.



- 5 Turn the GoTo Seat over again and rest the lateral support on top of the GoTo as pictured above.

## Lateral Support



- 6 Loosen the lateral support side straps as much as possible **but keep the buckle connected.**




- 7 Pull one side of the plastic insert out of the cover.




- 8 Remove the strap by feeding the plastic buckle through the holes and then through the upholstery.

- 9 Repeat with the other side of the lateral support. Once removed from the plastic lateral support, your upholstery is ready for washing.

## Seat Base

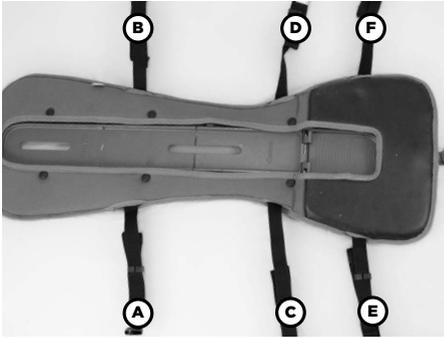


- 1 Lay the GoTo Seat base face-down and unbutton the upholstery.

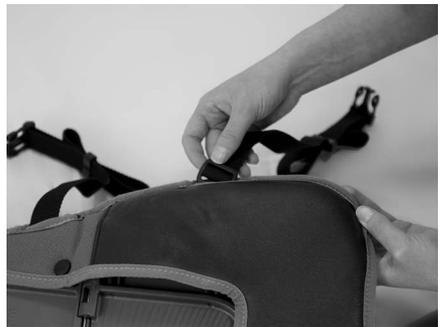

- 2 Remove straps E and F from the GoTo Seat pad by threading the buckles through the holes of the upholstery and plastic base.

# Seat Base

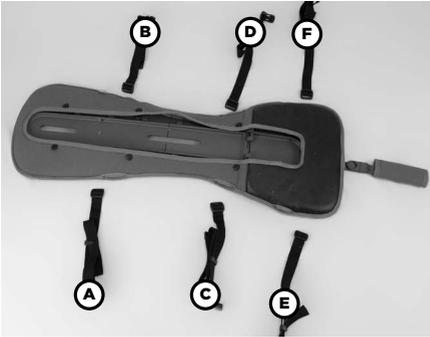

3 Repeat for straps A, B, C and D.



Connect the straps together in their pairs and set aside in a safe place.



Remember that straps E and F are longer and should be attached back into seat pad only. Straps E and F have a different warning label which can be used to identify them if necessary.



4 As with the above straps, thread the buckle of the groin strap through its corresponding hole in the GoTo Seat base at the bottom of the seat pad, followed by the upholstery.



5 Remove the insert from the upholstery. For the GoTo Size 1, undo the Velcro at the seat base to remove the insert.